

UFREE BEARD TRIMMER

Professional Grooming System

User Manual & Operating Guide

Downloaded from: <https://ufreetrimmer.com/>

Important Safety Information

WARNING: Read all instructions before using this appliance. Failure to follow safety precautions may result in injury or damage to the device.

- **Keep away from water:** Do not use near bathtubs, showers, or sinks
- **Unplug when not in use:** Always disconnect from power when cleaning or storing
- **Check for damage:** Inspect cord and plug before each use
- **Adult supervision required:** Keep away from children under 16
- **Do not disassemble:** No user-serviceable parts inside
- **Use only original attachments:** Third-party accessories may cause damage

Product Overview

Congratulations on your purchase of the Ufree Beard Trimmer, a professional-grade grooming tool designed for precision trimming and versatile styling. This advanced trimmer features precision-ground stainless steel blades, multiple length settings, and ergonomic design for comfortable use.

What's in the Box

- Ufree Beard Trimmer (main unit)
- 6 adjustable comb attachments (1mm, 3mm, 6mm, 9mm, 12mm, 15mm)
- Detail trimmer attachment
- Cleaning brush
- USB charging cable
- Travel pouch
- User manual

Technical Specifications

Specification	Details
Motor Type	High-torque rotary motor
Blade Material	Precision-ground stainless steel
Length Settings	0.5mm - 15mm (6 comb attachments)
Battery Type	Lithium-ion rechargeable
Battery Life	Up to 90 minutes continuous use
Charging Time	2 hours for full charge
Input Voltage	100-240V AC, 50/60Hz
Dimensions	175mm x 45mm x 35mm
Weight	285g
Noise Level	Less than 60dB

Getting Started

Initial Setup

- 1 **Charge Before First Use:** Connect the USB charging cable to the trimmer and plug into a USB power adapter or computer. The LED indicator will show red while charging and turn green when fully charged.
- 2 **Remove Protective Cap:** Carefully remove the blade guard from the cutting head.
- 3 **Select Attachment:** Choose the appropriate comb attachment for your desired trim length.

Understanding the Controls

- Power Button:** Press and hold for 2 seconds to turn on/off
- Speed Control:** Short press to cycle through 3 speed settings
- LED Indicators:** Battery level and charging status
- Lock Button:** Hold to lock/unlock device (travel safety)

Operating Instructions

Basic Trimming Technique

1. **Preparation:** Ensure hair is clean and dry for best results
2. **Attachment Selection:** Start with a longer comb attachment and work down to desired length
3. **Power On:** Press and hold power button until device activates
4. **Speed Selection:** Choose appropriate speed (lower for detail work, higher for bulk trimming)
5. **Trimming Motion:** Move against hair growth direction with steady, overlapping strokes
6. **Edge Work:** Use without attachment or detail trimmer for precise edges

Comb Attachment Guide

Attachment Size	Hair Length	Recommended Use
1mm	Very short	Close trimming, stubble look
3mm	Short	Short beard maintenance
6mm	Medium-short	Standard beard trimming
9mm	Medium	Fuller beard maintenance
12mm	Long	Long beard shaping
15mm	Very long	Initial trimming of long beards

Advanced Styling Techniques

Creating Professional Beard Styles

- Full Beard:** Use 9-12mm attachment for overall length, then detail edges with 3mm or no attachment.
- Goatee:** Trim surrounding area with 1-3mm attachment, maintain goatee area with 6-9mm attachment.
- Stubble:** Use 1-3mm attachment consistently across entire area for even stubble look.
- Mustache:** Use detail trimmer or no attachment for precision work around upper lip area.

Fading and Blending

1. Start with longest desired length at top
2. Gradually use shorter attachments moving downward
3. Blend transition areas with gentle overlapping motions
4. Use detail trimmer for final touch-ups

Maintenance and Cleaning

After Each Use

- **Turn Off and Unplug:** Ensure device is completely powered down
- **Remove Hair:** Use included cleaning brush to remove loose hair from blades and housing
- **Wipe Down:** Clean exterior with slightly damp cloth (avoid getting water in charging port)
- **Dry Thoroughly:** Ensure all components are completely dry before storage

Weekly Deep Cleaning

1. Remove all attachments and rinse under warm water
2. Clean blade assembly with cleaning brush
3. Apply one drop of blade oil to cutting blades (if provided)
4. Wipe down entire unit with disinfectant wipe
5. Allow all parts to air dry completely

Maintenance Schedule

- **Daily:** Remove loose hair, wipe exterior
- **Weekly:** Deep clean all components
- **Monthly:** Check blade sharpness and alignment
- **Quarterly:** Professional blade service (if needed)

Battery Care and Charging

Charging Instructions

- Use only the provided USB charging cable
- Charge for 2 hours for full battery capacity
- Red LED indicates charging, green LED indicates full charge
- Can be used while charging (corded operation)

Battery Optimization

- **First Use:** Charge fully before initial operation
- **Regular Use:** Recharge when battery indicator shows low
- **Storage:** Charge to 50% if storing for extended periods
- **Temperature:** Charge and store at room temperature (15-25°C)

Troubleshooting

Problem	Possible Cause	Solution
Trimmer won't turn on	Battery depleted	Charge for 2 hours, check charging indicator
Poor cutting performance	Dull blades or hair buildup	Clean thoroughly, oil blades, replace if necessary
Uneven trimming	Incorrect technique or damaged comb	Use steady overlapping strokes, check comb attachment
Excessive noise or vibration	Hair clogged in mechanism	Clean blade assembly and motor housing
Won't charge	Faulty cable or charging port debris	Try different cable, clean charging port gently
Skin irritation	Too much pressure or dull blades	Use lighter touch, ensure blades are sharp and clean

Warranty Information

Your Ufree Beard Trimmer is covered by a comprehensive warranty:

- **Duration:** 2 years from date of purchase
- **Coverage:** Manufacturing defects and component failures
- **Exclusions:** Damage from misuse, normal wear, or unauthorized repairs
- **Service:** Contact customer support through <https://ufreetrimmer.com/>

Warranty Registration

Register your product online at <https://ufreetrimmer.com/> within 30 days of purchase to activate full warranty coverage and receive product updates.

Customer Support

For technical support, replacement parts, or warranty service:

- **Website:** <https://ufreetrimmer.com/>
- **Email:** support@ufreetrimmer.com
- **Phone:** 1-800-UFREE-01 (1-800-837-3301)
- **Hours:** Monday-Friday, 9AM-6PM EST

Environmental Information

Ufree is committed to environmental responsibility. This product contains a rechargeable lithium-ion battery that should be recycled at end of life. Do not dispose of in regular household waste. Contact local authorities for proper battery recycling facilities.